 


Windows XP Instructions

- 1 Connect the **morespace** USB cable into the PC.
- 2 Within a minute, the icon (boxed in red) should appear in the lower right corner of the taskbar.



- 3 Open "My Computer" from the desktop or Start menu and **morespace** will be listed. Drive letter may vary.

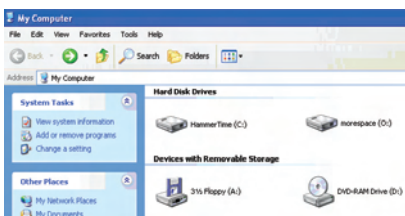

- 4 **morespace** is now available to save your digital information.

SAFE REMOVAL/DISCONNECTING INSTRUCTIONS:

- 1 Close out all windows and applications accessing **morespace**.
- 2 Left click on the Safely Remove Hardware icon in the lower right corner of the taskbar.



- 3 Click on the correct drive (if multiple USB storage devices are plugged in more than one may appear).
- 4 Now you can safely disconnect the drive.

Important: For highest performance and reliability, it is recommended that the latest updates and services pack are installed. For Windows XP, go to the Start Menu and select Windows Update.

All data stored on the Hammer **morespace** hard drive should have a duplicate copy on a CD, DVD, backup hard drive or other data storage device.


In addition, the **morespace** hard drive is formatted as FAT 32 to be accessed by both Macs and PCs. Note that FAT 32 file system has a 4GB limitation on file sizes. To achieve highest performance with Windows XP, it is recommended that you reformat to NTFS.

Windows Vista Instructions

- 1 Connect the **morespace** USB cable into the PC.
- 2 Within a minute, the icon (boxed in red) should appear in the lower right corner of the taskbar.



- 3 Open "Computer" from the desktop or Start menu and **morespace** will be listed. Drive letter may vary.

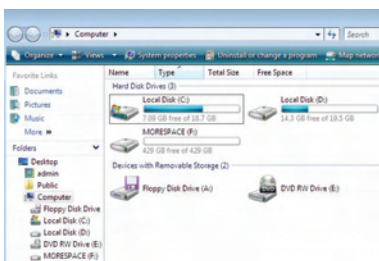

- 4 **morespace** is now available to save your digital information.

SAFE REMOVAL/DISCONNECTING INSTRUCTIONS:

- 1 Close out all windows and applications accessing **morespace**.
- 2 Left click on the Safely Remove Hardware icon in the lower right corner of the taskbar.



- 3 Click on the correct drive (if multiple USB storage devices are plugged in more than one may appear).
- 4 Now you can safely disconnect the drive.

Important: For highest performance and reliability, it is recommended that the latest updates and services pack are installed. For Windows Vista, go to the Start Menu and go to All Programs and select Windows Update.


All data stored on the Hammer **morespace** hard drive should have a duplicate copy on a CD, DVD, backup hard drive or other data storage device.

In addition, the **morespace** hard drive is formatted as FAT 32 to be accessed by both Macs and PCs. To achieve highest performance with Windows Vista, it is recommended that you reformat to NTFS.

Mac OS X Instructions

- 1 Connect the **morespace** USB cable into the computer.

- 2 After a few seconds the USB icon will appear on the desktop.

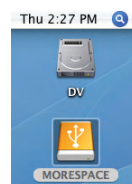

- 3 **morespace** is now available to save your digital information.

SAFE REMOVAL/DISCONNECTING INSTRUCTIONS:

- 1 Close out all windows and applications accessing **morespace**.
- 2 Drag the USB drive icon on the desktop to the trash.
- 3 Now you can safely disconnect the drive.

Important: For highest performance and reliability, it is recommended that the latest updates and services pack are installed. For Mac OS X, go to the Apple menu and select Software Update.

 
All data stored on the Hammer **morespace** hard drive should have a duplicate copy on a CD, DVD, backup hard drive or other data storage device.

In addition, the **morespace** hard drive is formatted as FAT 32 to be accessed by both Macs and PCs. Note that FAT 32 file system has a 4GB limitation on file sizes. To achieve highest performance with Mac OS X, it is recommended that you reformat to HFS.

Mac OS Formatting

If the drive doesn't show on the desktop, then open disk utility. Open HD → Applications → Utilities → Disk Utility.

You should see something similar to this:

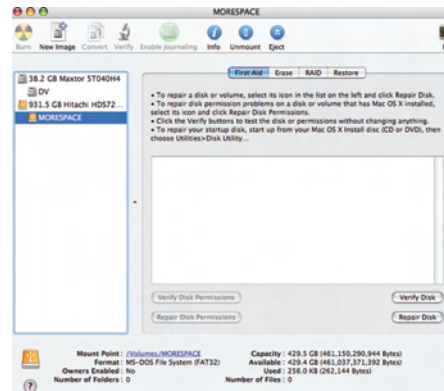

Please copy the Total Media backup program to your machine /C: drive before formatting. Select the USB drive on the left part and then erase. Select the volume format you want to use (Note: to use the drive fully on both a Microsoft PC and a Mac, the format needs to be MS-DOS File System). Next, type in the name for the volume/driver. Then click on the erase button on the bottom right. This will make the drive usable on your Mac.


For detailed instructions on how to format the drive with different versions of Mac OS's, please go to www.hammer-storage.com/support/faq.asp.

Windows Formatting

Please copy the Total Media backup program to your machine /C: drive before formatting.

If the drive doesn't show in "My Computer", go to Start → Settings → Control Panel → Administrative Tools → Computer Management. Now select Disk Management under Storage from the menu on the right.

You should see something like this:

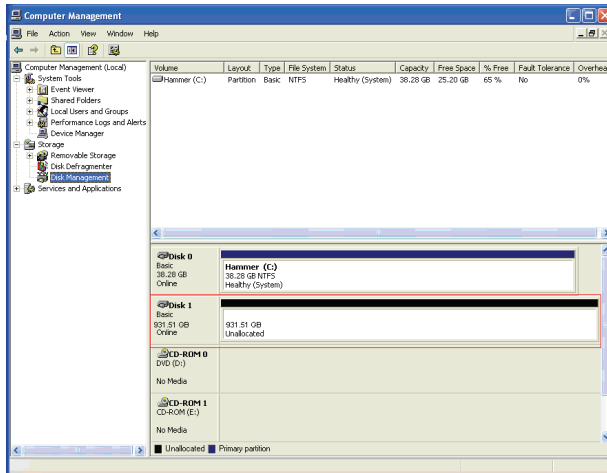

On the bottom of the right side of the Computer Management window, find the disk with a capacity that closely matches your Hammer morespace (i.e. Disk1).


Change drive letter: Letter may already be in use by a network drive. Right click on the box that includes the drive letter and select Change Drive Letter and Paths. Now click on "change" or "add" (if no letter is listed), and select a letter that is not being used by a network drive. To check what drive letters are used, open "My Computer" and note the drive letters used under "Network Drives."

Reformat morespace: Right click on the morespace icon and pick initialize disk/drive. Then right click on the white box that says unallocated and select new partition/format. Follow the wizard. When it is done with the partition and format it will read healthy and be ready for use.

If it reads unallocated, you need to create a partition and format. Then right click on the white box that says unallocated and select new partition. Follow the wizard. When it is done with the partition and format it will read healthy and be ready for use.

Important: Select Quick Format for a timely format.

About Your Portable Drive

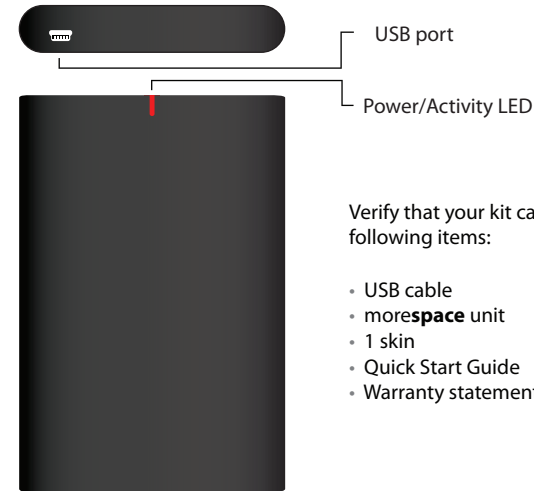

Verify that your kit came with all of the following items:

- USB cable
- morespace unit
- 1 skin
- Quick Start Guide
- Warranty statement

Product Resources & Support

Having Trouble?

What is the difference between NTFS and FAT32?

What is the difference between HFS and FAT32?

What is the difference between USB 1.1 and USB 2.0?

Why is the capacity on the box different from the capacity on the computer?

What is the difference between archiving and backing up?

Answers to FAQ's available at

www.hammer-storage.com/support/faq.asp

Need More Help?

Contact Tech Support
Email - support@hammer-storage.com
Phone - **1.800.237.0840**

For a One Year Warranty,
please register your product at
www.Hammer-Storage.com